



# **DLJZF**

Angle Seat Valve

## **DLJZF Series**

Angle Seat Valve







# Fix and Maintain

■ 1. Clean the pipes carefully from any residue, dribble or welding residue to avoid any damage to the seal.

**2.** To be installed as required, preferably with actuator in upright position.

 Connect the pipes according to the reference points (flow direction) found on the valve body.
Only disassemble actuator if required by customer.

**4.** Before taking the valve apart, depressurize the medium supply and piloted air supply from piping system.

#### **Ordering Code**

DLJZF

**Series Code** 

DLJZF: Angle Valve

Orifice

15

15: 1/2" , 20: 3/4" , 25: 1" 32: 1.1/4" , 40: 1.1/2" , 50: 2" 65: 2.1/2" , 80: 3"


#### **Specification**

Model	DLJZF			
Connection Size	DN15 - DN80			
Screw	1/2" ~ 3"			
Material of Body	Stainless Steel 316/304			
Acting Device Material	Stainless Steel 304			
Valve Core Seal	PTFE / FPM			
Valve Rod Seal	PTFE / FPM			
Piston Seal	FPM / NBR			
Suitable Medium	Water, Neutral Air (or liquid), Alchohol, Oil, Organic liquid, Steam, Weak Acid or alkalescenc			
Medium Temperature	PTFE: -10 °C ~ +180 °C			
Stickiness	Max. 600 mm <sup>2</sup> / sec.			
Installation	Follow flow installation			
Control Medium	Air / Neutral Air			
Controled Pressure Range	3 ~ 8 Bar			
Working-pressure	0 ~ 16 Bar			

### **DLJZF Series**

Angle Seat Valve

#### **Overall Dimension**

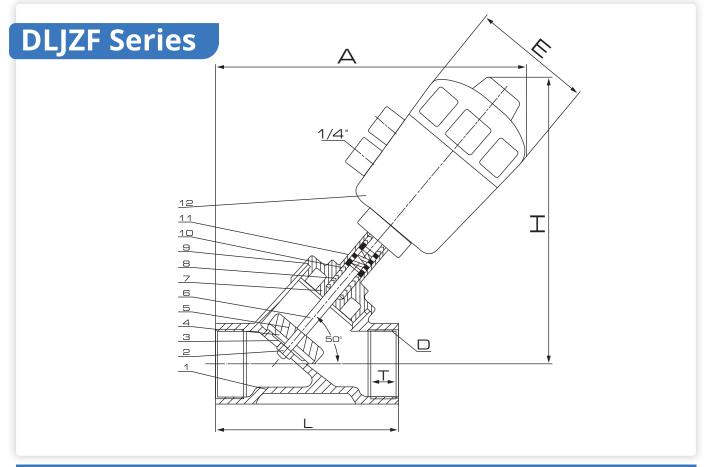

#### **Dimensions/Parts**

Slze	L	T	D	Α	Н	E	Actuater
15	85	14	1/2	180	140	65	ø50
20	95	14	3/4	185	145	65	ø50
25	100	18	1	220	185	80	ø63
32	116	18	1 1/4	230	188	80	ø63
40	130	18	1 1/2	235	195	80	ø63
50	145	20	2	268	225	100	ø80
65	182	24	2 1/2	325	320	126	ø100
80	205	28	3	335	330	126	ø100

No.	Name	Material		
12	Plastic baad pneumatic device	PPS		
11	Spring	60S12Mn		
10	Metal pads	304		
9	Body Seal	PTFE		
8	Stem Seal	PTFE		
7	Connecting Piece	CF8/CF8M		
6	Stem	304/316		
5	Valve Core	304/316		
4	Seat	PTFE		
3	Gasket	304/316		
2	Nut	304/316		
1	Body	CF8/CF8M		